

# How to Properly Clean Diamond Tooling

## 1. SOAK or SPRAY

- Dilute SlurrySafe 50% with water
- Soak for 15-30 min, OR
- Spray well with a sprayer




## 2. REMOVE & RINSE

- Remove from the bucket
- Rinse thoroughly with water



## 3. DRY TOOLS

- Lay tools flat in tool trays to dry

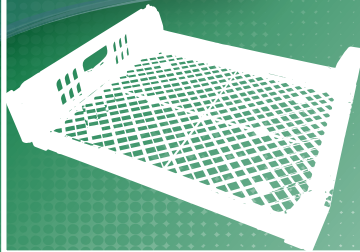

\*NOTE: clean tools outside or on a tarp so that the floor is protected. SlurrySafe can etch concrete.